








 <b>Sonde</b>	Pressing this button will <b>activate and de-activate the sonde</b> . With each press of the button the sonde frequency will change. After cycling through the frequencies the sonde will turn off. When active, the button will glow green and the sonde frequency will appear in the status bar.
 <b>Record</b>	Press this button to <b>start a recording</b> . When active the button will <b>glow red and the record icon</b> will appear in the status bar. Press this button again to <b>end the recording</b> .
 <b>Picture</b>	Press this button to <b>take a JPEG picture</b> . When pressed a message will appear top center screen to confirm that the picture capture was successful.
 <b>Zoom</b>	Press this button to <b>enter the digital zoom mode</b> . One press will zoom x 2, press again to zoom x 3, and press again to exit the zoom mode. The level of zoom will be shown in the status bar.
 <b>Playback controls and Camera lights</b>	<b>While viewing or Recording:</b> Use the <b>Left/Right Arrow</b> section to <b>lower and raise the camera lights</b> . Use the <b>Pause/Resume</b> button while recording or playing a video to <b>pause and resume the video</b> . <b>To re-name a file:</b> Use these buttons to navigate the on-screen keyboard which appears when a recording is stopped. Use the center Enter button to select the letters to name the file. <b>While playing a video:</b> Use these buttons to Pause, Forward Fast, Stop and Rewind the video playing.






**LCD Keypad Buttons**

 <b>Step Back / ESC</b>	Press this key to <b>go back to the previous screen or to exit</b> an operation.
 <b>Karat choice keys</b>	Press these keys to <b>make a selection</b> while in various menus.
 <b>Enter</b>	Press this key when required to <b>complete an action</b> . Press this key to <b>hide and show the main menu bar</b> while viewing and recording.








**Make a Video Recording or JPEG Picture**

 <b>Record</b>	Press this button to <b>start a recording</b> . The button will <b>glow red and the record icon</b> will appear in the status bar while recording. Press this button to stop the recording.
 <b>Picture</b>	Press this button to <b>take a JPEG picture</b> . When pressed a message will appear top center screen to confirm that the picture capture was successful.


**Main On-Screen Menu**

 <b>Files</b>	Press this key to enter the <b>File Manager</b> to manage video and picture files.
 <b>Display</b>	Press this key to access the <b>LCD's settings</b> Backlight, Brightness, Contrast Hue and Saturation settings
 <b>OSD</b>	Press this key to <b>change the colors and position of the date, distance and time</b> shown on the screen
 <b>Lights</b>	Use this key to <b>adjust the camera lights</b> .
 <b>Setup</b>	Use this key to <b>enter the systems setup</b> options. Regional, storage, features, system and wi-fi settings.

**Playing, Copying and Deleting Files**

 <b>File Manager</b>	Press the <b>File Manager</b> key to enter the file manager.
 <b>SD/USB</b>	Choose the drive where the <b>file is located</b> , SD or USB
 <b>Up/Down Scroll</b>	Use the <b>Up/Down Scroll</b> keys to highlight the desired file
 <b>Play</b>	<b>Play</b> - Press the <b>Play</b> key to play the file.
 <b>Select</b>	Press the <b>Select</b> key to individual files or press <b>Select All</b> to select all of the files.
 <b>Copy</b>	<b>Copy</b> - Select the <b>Copy</b> key. Select the copy destination, SD or USB.
 <b>Delete</b>	<b>Delete</b> - Press the <b>Delete</b> key.

**vCamMX File Manager Screen**

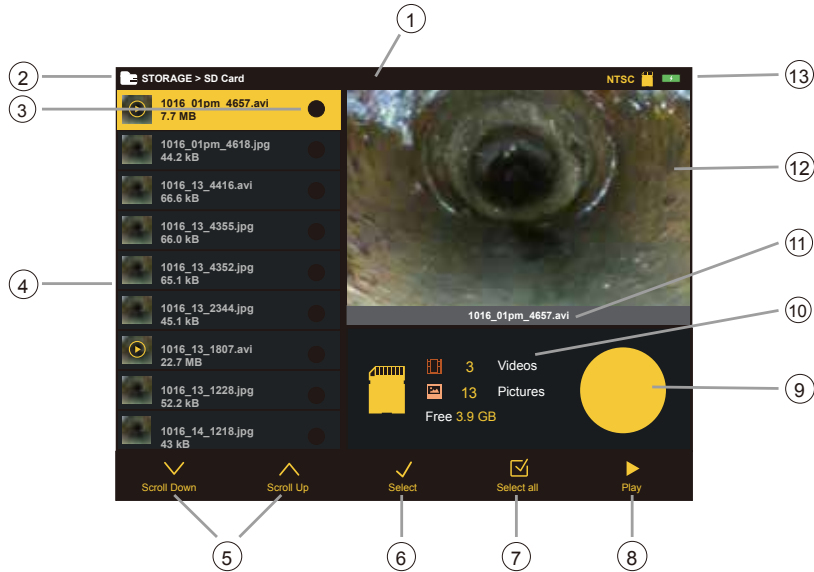

1	Status bar
2	Menu and sub-menu list
3	File select status
4	File list
5	Scrolling keys
6	Select file(s) key
7	Select all files key (Copy keys*)
8	Play key (Delete keys*)
9	Free space graph
10	SD Card/USB drive information
11	Active file name
12	Preview window
13	System information


**Note:** \*When more than one file is selected the Select All and Play keys are replaced by Copy and Delete keys.

**Vivax-Metrotech Corp. (Headquarters)**  
3251 Olcott Street, Santa Clara, CA 95054, USA

T/Free: 800-446-3392  
Tel: +1-408-734-1400  
Fax: +1-408-734-1415  
Email: sales@vxmt.com  
Website: www.vivax-metrotech.com  
Please visit [www.vxmt.com](http://www.vxmt.com) for other locations.




**vCamMX Quick Guide V1.0**

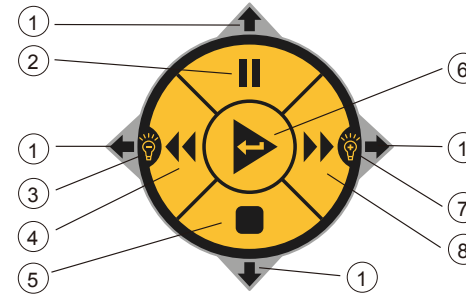**vCamMX Playback Controls, Camera Lights and On-screen Keyboard**



1	<b>Keyboard Navigation</b>	While the file rename dialog box is on the screen, use the buttons corresponding to the top, right, bottom and left arrows to navigate through the on-screen keyboard. Navigate to and press the next key on the on-screen keyboard to save the changes.
2	<b>Pause and Resume</b>	Use this button while recording or playing a video to pause and resume the video.
3	<b>Lower Camera Lights</b>	Lower the camera lights while viewing or recording.
4	<b>Rewind</b>	Rewind the video during playback.
5	<b>Stop</b>	Stop the recording or playing video.
6	<b>Enter Button</b>	Press while in File Manager to play a selected video.
7	<b>Raise Camera Lights</b>	Raise the camera lights while viewing or recording.
8	<b>Fast Forward</b>	Forward fast through the playing video.

**Control Box Buttons**

 <b>On/Off Button</b>	Press and release to <b>turn the unit on</b> . When on this button will glow green. Press and hold to turn the unit off.
 <b>Distance reset</b>	Pressing this button will <b>reset the distance counter to zero</b> . A message will appear top center screen confirming that the counter has been reset.
 <b>Microphone</b>	Press this button to <b>turn the internal microphone on and off</b> . When on, the button will glow red and the microphone icon will be shown in the status bar. Stand between one and three feet (30cm & 1m) of the screen and speak facing the screen. The internal microphone is located top center above the screen.